Falconry Backpack Installation Instructions

Step 1: Put both ends through the top of the backpack and then back through the loop you just created. Pull it tight and even.



Step 2: Put the pack on the bird and cross the ribbon ends on the front. Mark the appropriate intersection on one lead.

Step 3: Thread a need, with a large eye, with the unmarked lead.



Step 4: Put the needle in at the point marked and pull the other lead through the marked lead.




Step 5: Even up the leads, thread the marked lead, and thread the needle through the unmarked lead where they intersect.

Step 6: Pull them tight and place it over the bird. Cross them under the wings, carefully making sure not to catch feathers, and then thread them through the back bottom slots. Preen in as many feathers as possible.

Step 7: Even up everything and tie a square knot to keep in place. This allows you to adjust it after the bird has preened everything in nicely.





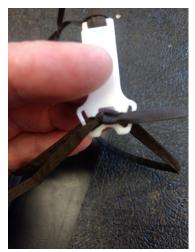

Step 8: Insert ziptie and lock it down on the square knot. Make sure to rotate the ziptie into the rear opening so it is less intrusive to the bird. This will keep the knot from being undone but make easy adjustments later. Trim the leads some and seal the ends with super glue or something else. Do not get any on the bird. Clip the ziptie tag.

